

Cable-Shift Cable Length Measurement

Measure cable length from center of shifter handle position to passenger side of transaxle bell housing at engine mating surface. Measurement is taken along the installed position of the cables.

The best way to measure is to:

1. Have a helper hold the end of the tape measure at the position of the center of the shift handle.
2. Position the tape as it will be installed along the passenger side of the engine sump. Allow the cables (tape) to be secured to frame rails/engine so as not to contact exhaust system.
3. Read the measurement in inches at the transaxle bell housing face (engine mating surface) at approximately 2 o'clock, as viewed from the rear of the transaxle.

Note: This measurement will determine both cable lengths.