

## **Cable-Shift Cable Length Measurement**

Measure cable length from center of shifter handle position to 8mm threaded hole in transaxle shift rod. Measurement is taken along the running length.

The best way to measure is to:

1. Have a helper hold the body of the tape measure at the nose cone end of the transaxle.
2. Assuming the transaxle will be used inverted, feed the tape over the driver side CV joint then downward along the side up the engine sump.
3. Proceed with the end of tape (over or under the fuel tank if necessary) to a point between and ahead of the seats where the centerline of the shift handle will be.
4. Read the tape (in total inches) at the center of the threaded hole in the transaxle shift rod.

Note: This measurement will determine both cable lengths.