

Cable-SHiFT
Cable Length Measurement
Type II/Mid Engine
Transaxle Inverted

Measure cable lengths from center of shifter handle position to dimple in transaxle shift rod. Measurement is taken along the running length.

The best way to measure is to:

1. Have a helper hold the body of the tape measure at the nose cone end of the transaxle.
2. Feed the end of the tape under the passenger side CV joint, over the starter and along the passenger side of engine sump.
3. Proceed with the end of the tape (over or under the fuel tank if necessary) to a point between and ahead of the seats where the centerline of the shift handle will be.
4. Read the tape (in total inches) at the center of the dimple in the transaxle shift rod.

Note: This measurement will determine both cable lengths.